

# Costar Code Distribution Unit

CD8



---

The Costar The code distribution repeats and extends single telemetry to 8 isolated and buffered telemetry through each port (RS-485). In case of isolated RS-485 telemetry, the code distributor can send signals 1.2km away (depending on physical parameters of the connection). Each output port can drive up to 32 devices.

---

- Distribute RS-485 Data Signal
- 1 Input x 8 Output
- Each Output Port drives up to 32 Devices
- LED Indicator for Power, Output and Error Detection
- Bidirectional Communication

# Costar Code Distribution Unit

## Models

CD8 8 Channel Code Distribution unit, RS485


## Inputs / Outputs

Data Input Port 3-position Screw Terminal  
Data Output Port 3-position Screw Terminal  
Drive Lines 8, 2 position Screw Terminals  
Communication RS-485 (2 wire)  
Indicator 1, Power LED (Red)  
8, Data LED (Green)  
8 Status DED (line error: Red)


## General

Power DC9-12V, 1A  
Dimension 7.5" (W) X 4.8" (D) x 1.8" (H)  
191mm (W) x 122 mm(D) x 45mm (H)

## Dimensions

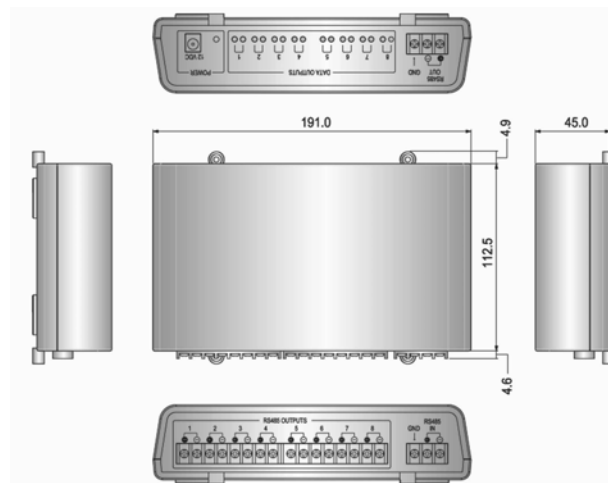

## System Diagram

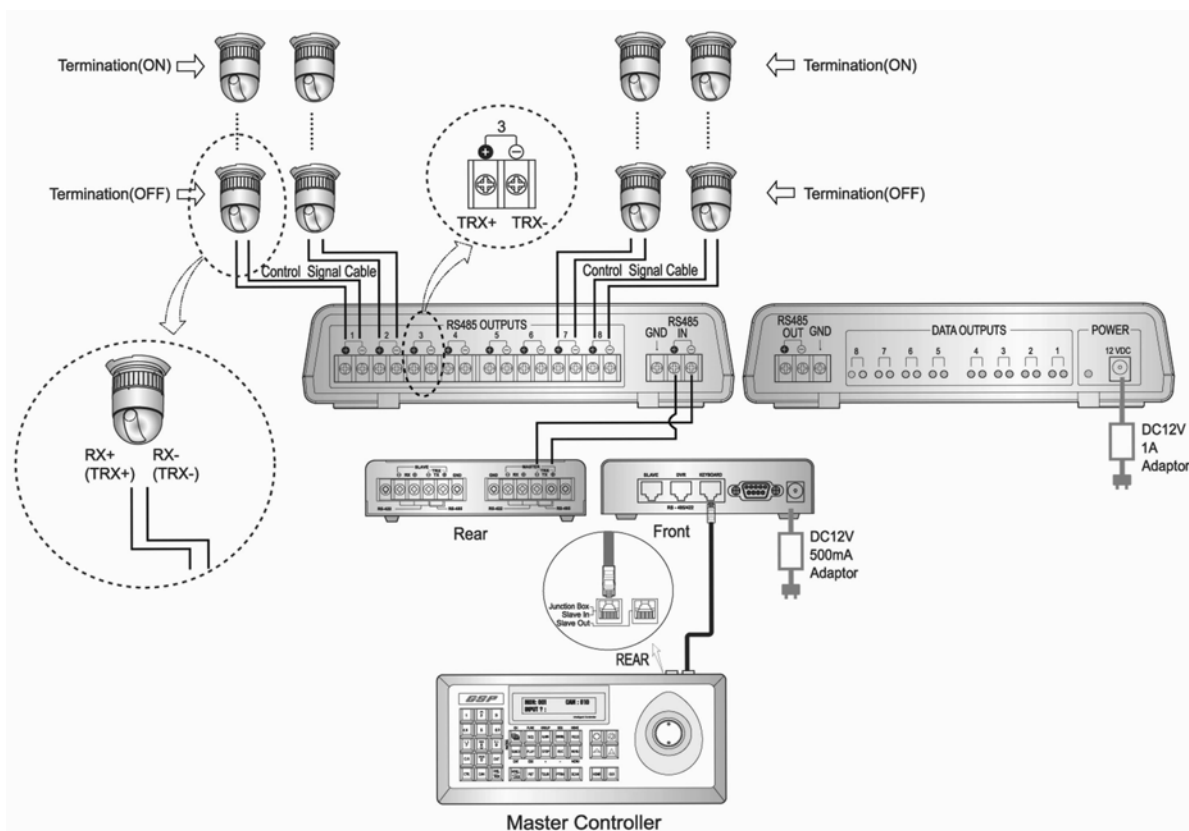

Design and specifications subject to change without notice. Conversions: 1" = 25.4mm Measurement conversions are approximate.